

Attention Ultra Micro F-27Q Stryker 180 BNF Owners using the DX6i Transmitter

Horizon Hobby has discovered an error in the first printing of the DX6i setup instructions for the Ultra Micro Stryker 180 manual.

For proper DX6i operation, please use the following setup for servo channel reversing:

Throttle: Normal **Aileron:** Reverse



Elevator: Normal **Rudder:** Normal

Instructions for DX6i receiver elevon connection are as follows:

Receiver elevon connection for DX6i

When using the DX6i transmitter, it is necessary to access the AR6400NBL receiver and exchange the aileron and elevator connections where they plug into the receiver in order to achieve the correct control direction as shown below.

When complete, replace and tape the hatch, then do a control test to confirm that the model operates correctly.

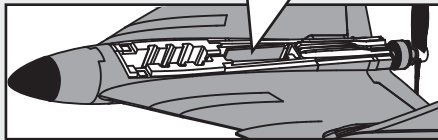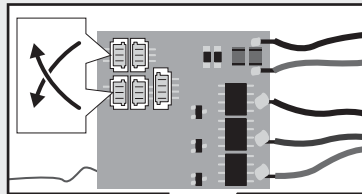

© 2011 Horizon Hobby, Inc.

ParkZone is a registered trademark of Horizon Hobby, Inc.

www.parkzone.com

Created 08/11 34868

